

100202 To 100293

Illustrated Parts List

MODEL SERIES

100202 To 100293

TYPE NUMBERS

0010 through 0070

0110 through 0467

401000 through 401118

 
TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**


- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 400108 are listed complete. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note" use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.



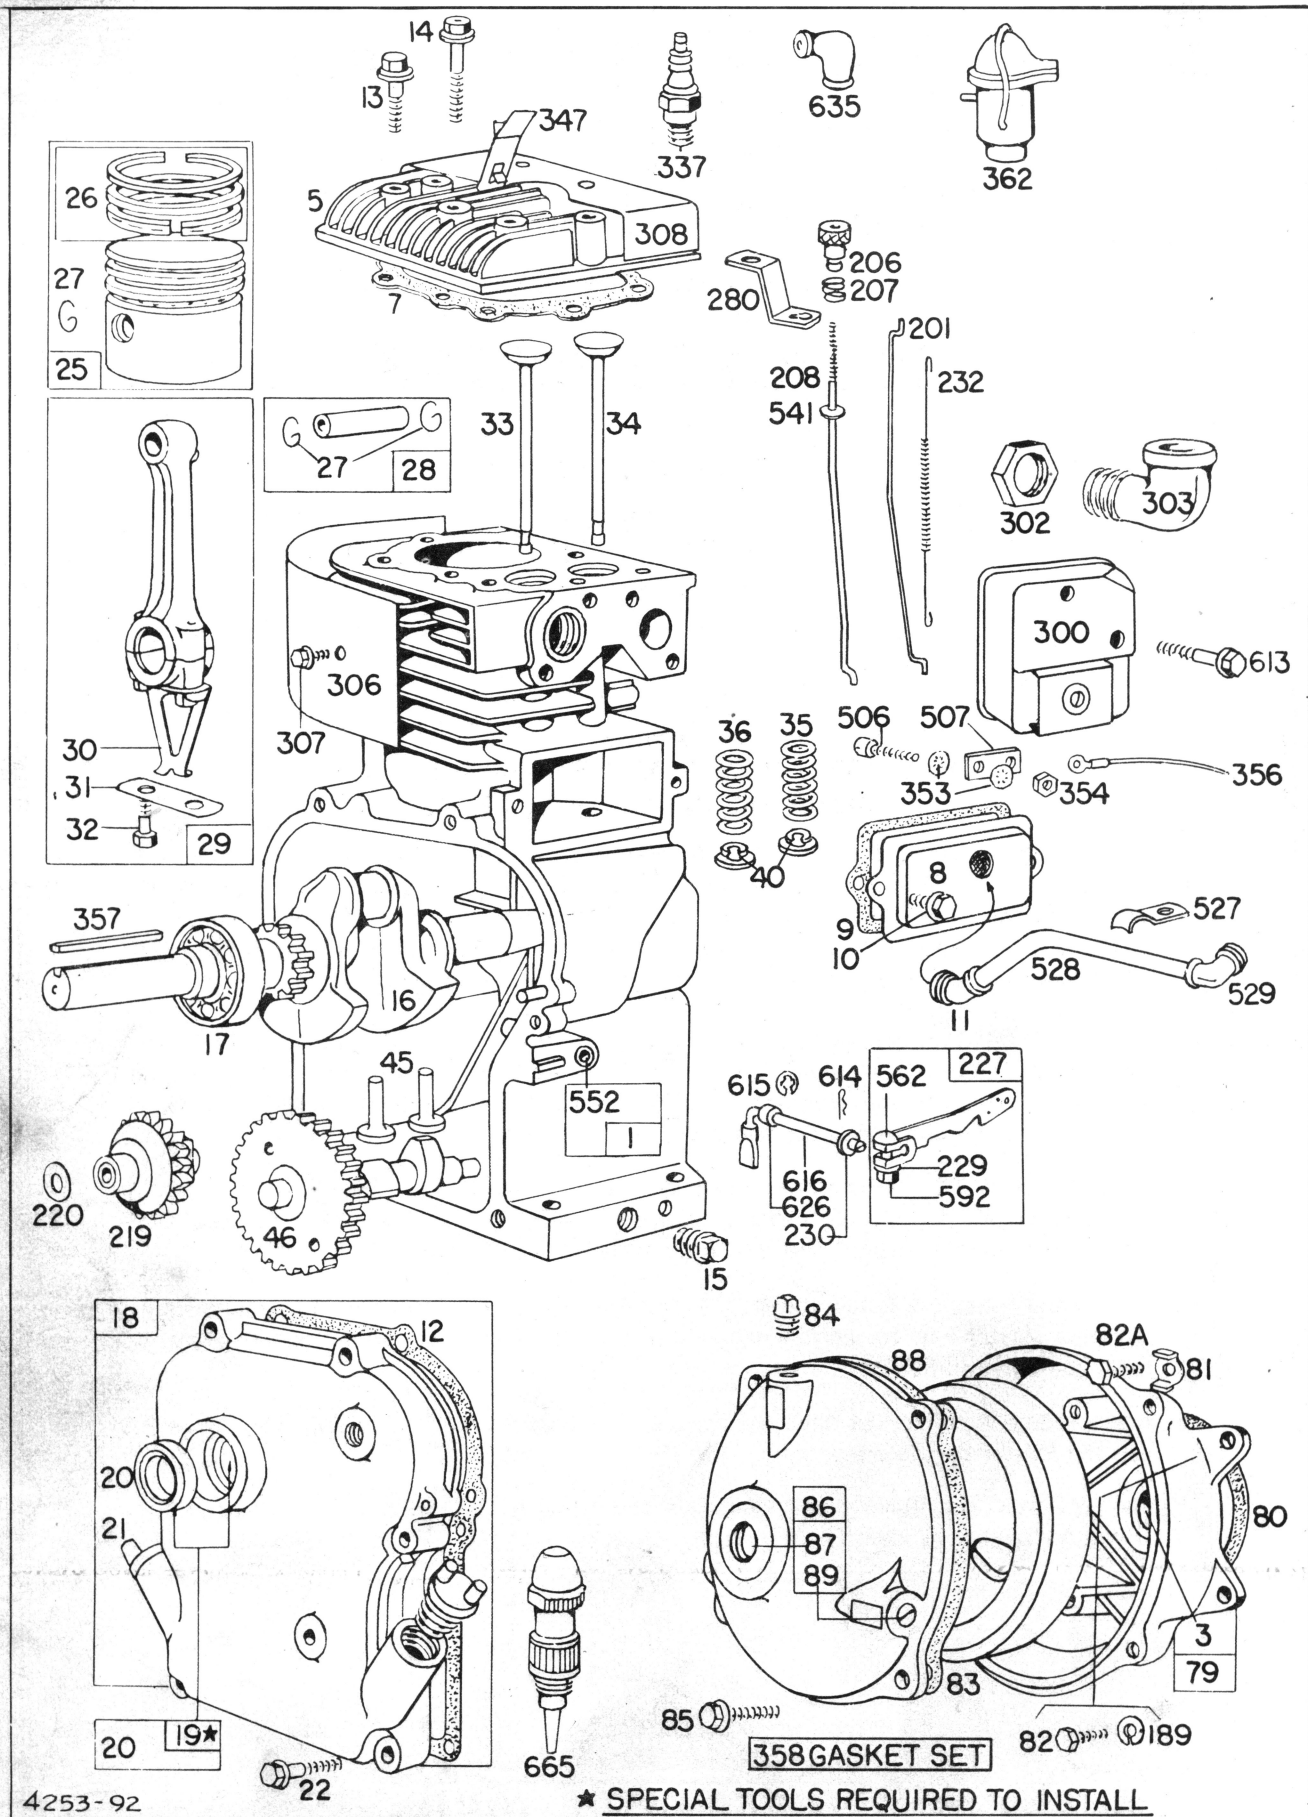

 Assemblies include all parts shown in frames

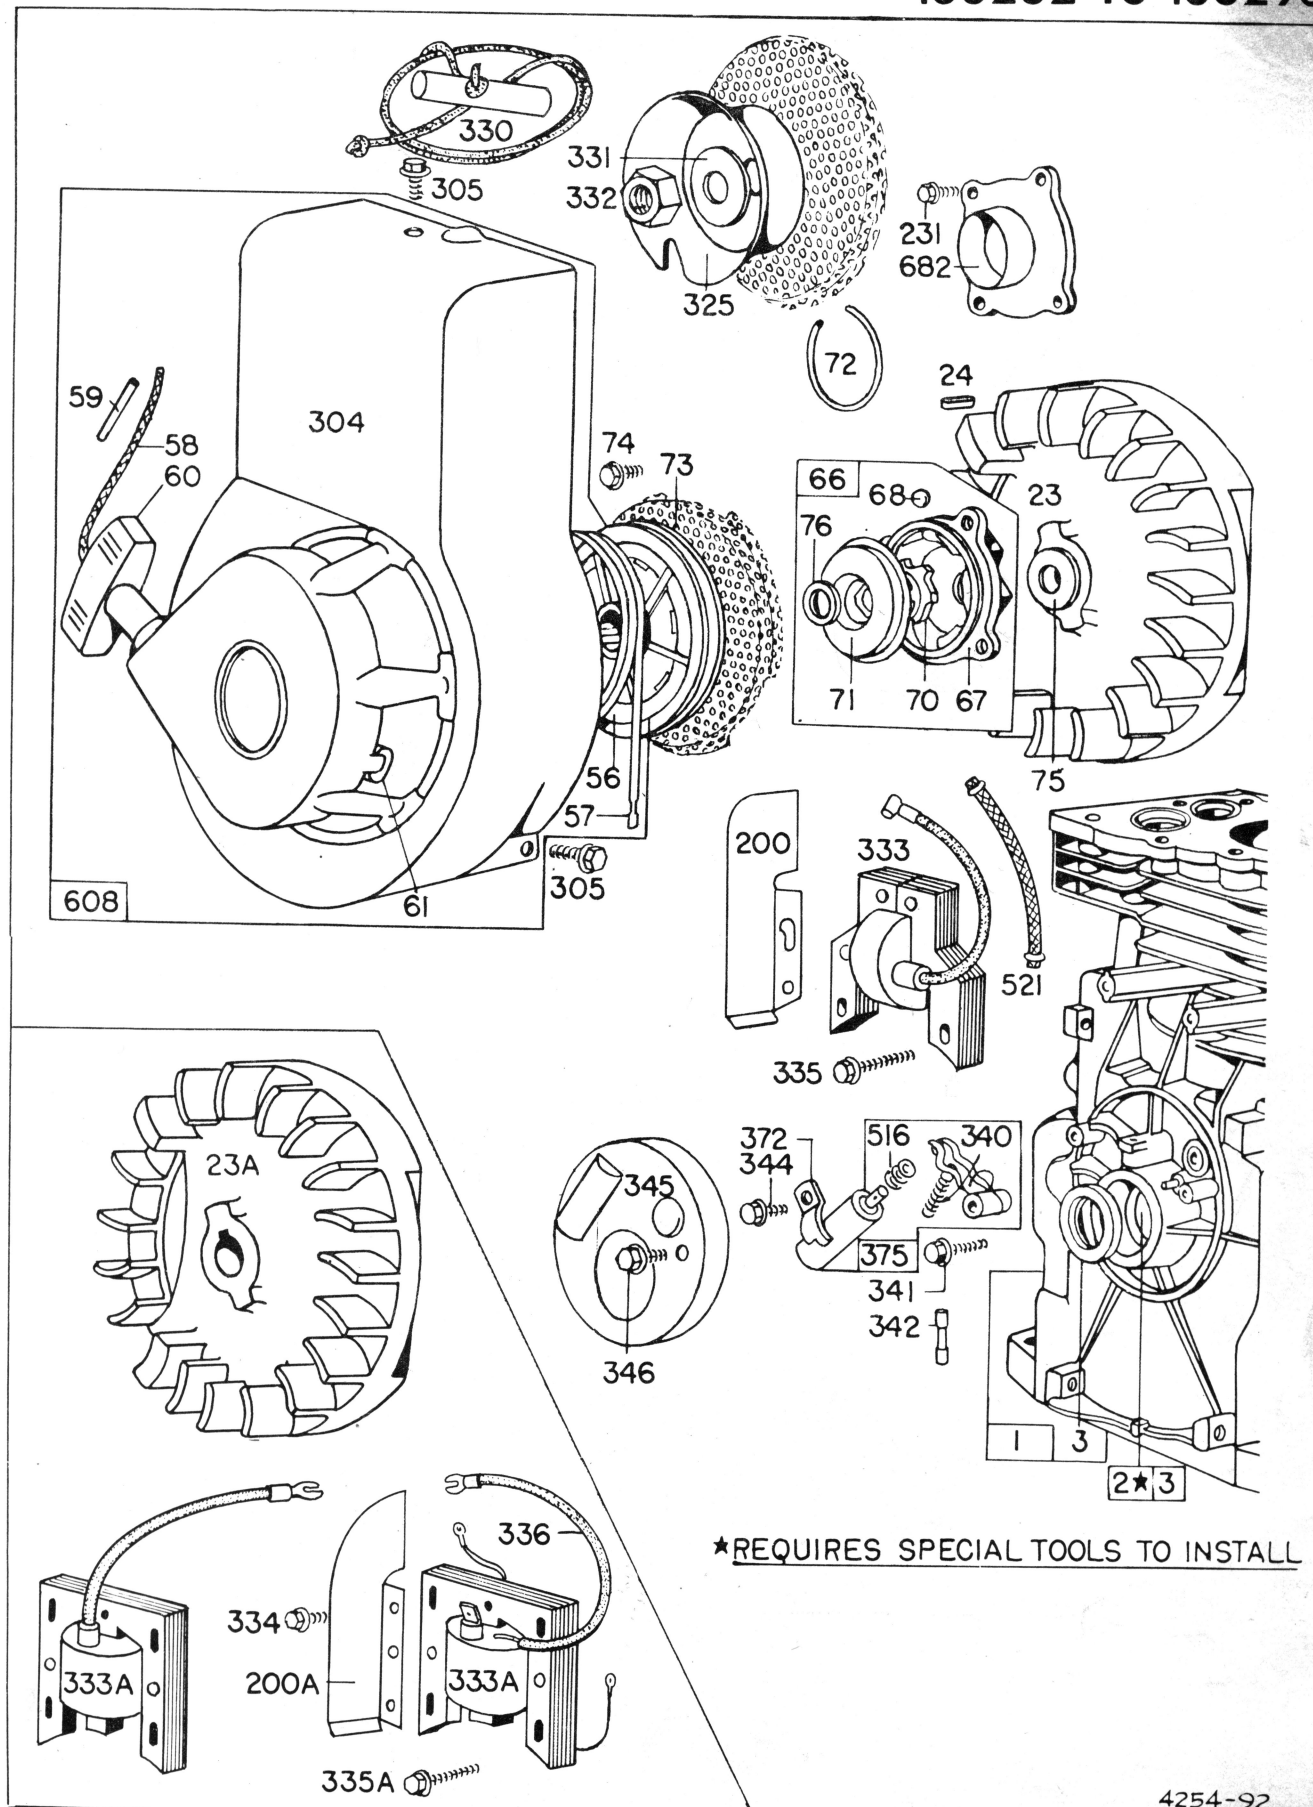


★REQUIRES SPECIAL TOOLS TO INSTALL

Assemblies include all parts shown in frames.

4254-92

 100202 To 100293

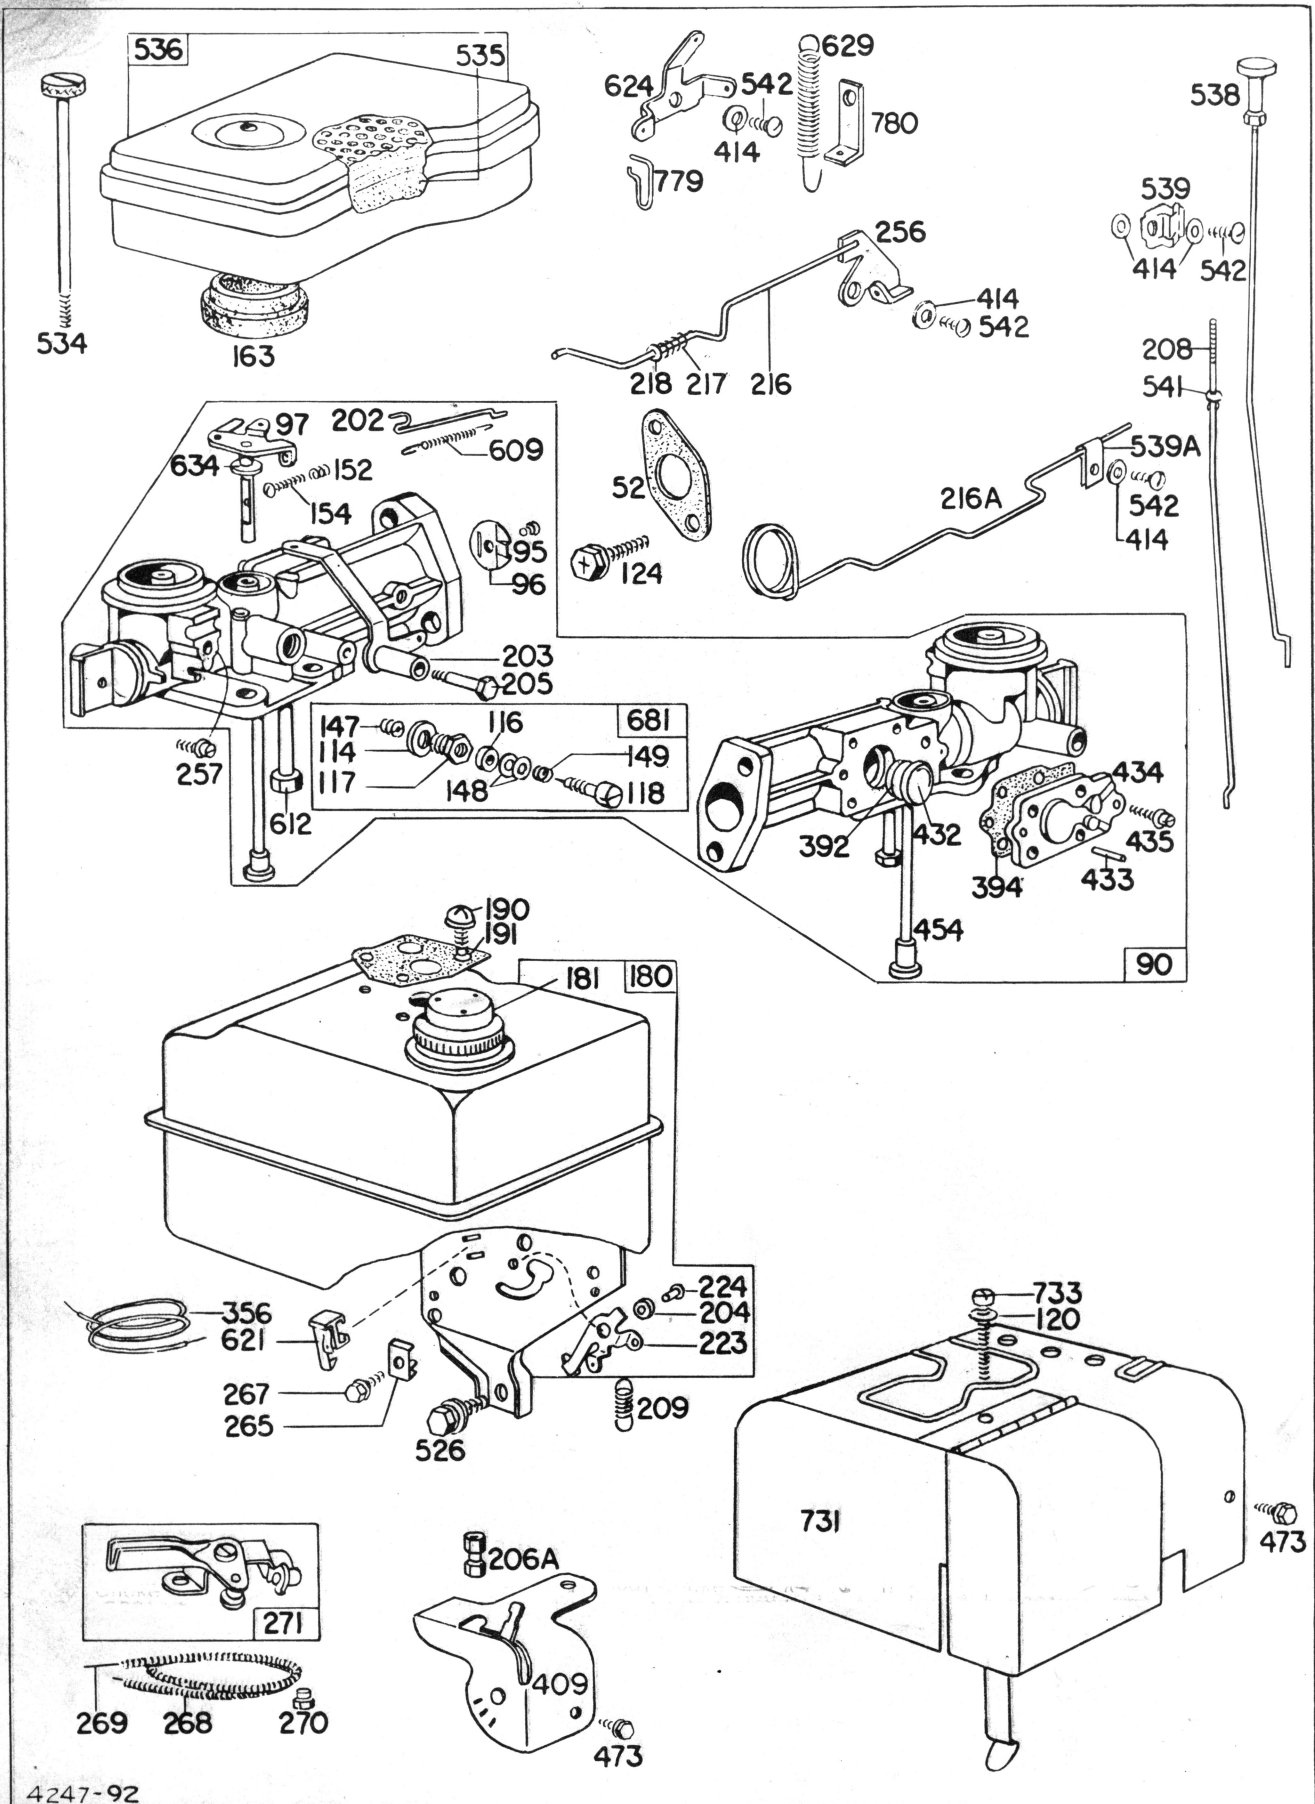

Assemblies include all parts shown in frames.

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
1	297566	Cylinder Assembly			0377, 0379, 0387, 0402, 0419, 0430, 0435, 0442, 0452, 401017, 401103, 401111, 401113, 401114, 401115.			261204 Crankshaft Used on type No. 0444.
	Note:	298753 Cylinder Assy. Used on type Nos. 0038, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454.				17	99158	Bearing—Ball
2	297565	Bushing—Cylinder			260724 Crankshaft Used on type Nos. 0035, 0112, 0182, 0218, 0255, 0337, 0339, 0340, 0346, 0365, 0439, 401013, 401099.	18	297602	Cover Assy. — Crankcase
	Note:	Requires special tools for installation.			260725 Crankshaft Used on type Nos. 0113, 0137, 0149, 0168, 0172, 0184, 0191, 0193, 0197, 0208, 0213, 0222, 0250, 0252, 0254, 0257, 0264, 0272, 0277, 0284, 0286, 0294, 0295, 0297, 0305, 0309, 0318, 0320, 0321, 0323, 0329, 0348, 0351, 0352, 0355, 0376, 0380, 0391, 0393, 0398, 0406, 0407, 0420, 0424, 0429, 0441, 0443, 0447, 0450, 0458, 0459, 0462, 401014, 401100.	Note:	298183 Cover Assy. — Crankcase Used on type Nos. 0070, 0117, 0126, 0143, 0154, 0177, 0216, 0235, 0245, 0364, 0366, 0368, 0408, 0444, 401092.	
3	89660	Seal—Oil						298204 Cover Assy. — Crankcase
5	211127	Head—Cylinder						Used on type Nos. 0035, 0036, 0037, 0038, 0112, 0113, 0114, 0115, 0137, 0149, 0163, 0168, 0172, 0182, 0184, 0190, 0191, 0193, 0196, 0197, 0201, 0205, 0207, 0208, 0213, 0217, 0218, 0222, 0223, 0227, 0248, 0249, 0250, 0251, 0252, 0254, 0255, 0256, 0257, 0264, 0266, 0272, 0276, 0277, 0283, 0284, 0286, 0294, 0295, 0296, 0297, 0300, 0302, 0304, 0305, 0306, 0309, 0314, 0318, 0320, 0321, 0323, 0325, 0329, 0331, 0337, 0339, 0340, 0343, 0345, 0346, 0348, 0351, 0352, 0353, 0354, 0355, 0361, 0362, 0363, 0365, 0367, 0369, 0370, 0372, 0376, 0378, 0380, 0384, 0388, 0391, 0393, 0394, 0396, 0398, 0404, 0405, 0406, 0407, 0409, 0418, 0420, 0424, 0426, 0427, 0429, 0436, 0437, 0439, 0440, 0441, 0443, 0447, 0449, 0450, 0451, 0454, 0455, 0456, 0458, 0459, 0462, 401013, 401014, 401015, 401016, 401099, 401100, 401101, 401102.
7	*270383	Gasket—Cylinder Head						
8	294178	Breather—Valve Chamber						
9	*27549	Gasket—Valve Cover						
10	93394	Screw—Breather Mounting Sem						
11	66578	Grommet—Breather Tube						
12	*270080	Gasket—Crankcase— .015" thick (Standard)						
	270125	Gasket—Crankcase— .005" thick						
	270126	Gasket—Crankcase— .009" thick						
13	93368	Screw—Cylinder Head (2-3/32" long)						
	Note:	93583 Stud—Cylinder Head (1) 22963 Washer (1) Used on type No. 0434.						
14	93369	Screw—Cylinder Head (2-15/32" long)						
	Note:	93583 Stud—Cylinder Head (1) 22963 Washer (1) Used on type No. 0434.						
15	91249	Plug—Pipe, 1/4" Std., Square Hd.						
	Note:	93448 Plug—Pipe (Hex. Socket) Used on type Nos. 0247, 0347.						
16	260719	Crankshaft						
	Note:	260721 Crankshaft Used on type Nos. 0049, 0116, 0131, 0132, 0136, 0156, 0160, 0170, 0176, 0185, 0194, 0210, 0224, 0230, 0236, 0242, 0253, 0259, 0260, 0261, 0262, 0268, 0273, 0293, 0298, 0307, 0308, 0311, 0317, 0319, 0335, 0336, 0338, 0344, 0356, 0373,						

* Included in Gasket Set—
Part No. 297615.

100202 To 100293

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
		298212 Cover Assy. — Crankcase Used on type Nos. 0049, 0116, 0131, 0132, 0136, 0156, 0160, 0170, 0176, 0185, 0194, 0210, 0224, 0230, 0236, 0242, 0253, 0259, 0260, 0261, 0262, 0268, 0273, 0293, 0298, 0307, 0308, 0311, 0317, 0319, 0335, 0336, 0338, 0344, 0356, 0373, 0377, 0379, 0387, 0402, 0419, 0430, 0435, 0442, 0452, 401017, 401103, 401111, 401113, 401114, 401115. 298517 Cover Assy. — Crankcase Used on type Nos. 0211, 0269, 0279, 0303, 0341, 0357, 0382, 0385, 0386, 0389, 0401, 0403, 0410, 0415, 0445, 0446, 0464.			230537 Adaptor— Oil Filler Pipe 230553 Pipe— Oil Filler Used on type No. 0331. 297357 Cap Assy. — Oil Filler Uses: 65304 Gasket 91258 Pipe— Oil Filler 230537 Adaptor— Oil Filler Pipe Used on type Nos. 0300, 0409, 0451. 22 93032 Screw—Crankcase Cover Mounting Sem Note: 93656 Stud Used to mount Crankcase Cover on type Nos. 0408, 0444, 0463, 0466. 23 297229 Flywheel Assembly (Used after Serial No. 6308231.) Note: 211424 Pulley—V-Belt Uses: 68428 Belt—Vee Used between flywheel and Starter Clutch on type No. 0221. 23A 297348 Flywheel Assembly (Used before Serial No. 6308261.) 24 61760 Key—Flywheel 25 Piston Assemblies below are used after Serial No. 6306141. 298168 Piston Assembly—Std. 298169 Piston Assembly— .010" O.S. 298170 Piston Assembly— .020" O.S. 298171 Piston Assembly— .030" O.S. Piston Assemblies below are used before Serial No. 6306171. 297570 Piston Assembly—Std. 297571 Piston Assembly— .010" O.S. 297572 Piston Assembly— .020" O.S. 297573 Piston Assembly— .030" O.S.			MODEL 100200 SERIES PISTON RING SETS: Note: For Chrome Piston Ring Set—standard size—order Part No. 298744. The following Piston Ring Sets are used after Serial No. 6306141: 26 298174 Ring Set—Std. Piston, consists of: 211297 Ring, Piston, Comp., Top, 5/64" wide 211298 Ring, Piston, Compression, Center, 5/64" wide 211299 Ring, Piston, Oil 298175 Ring Set—.010" O.S. Piston, consists of: 211353 Ring, Piston, Compression, Top, .010" O.S., 5/64" wide 211352 Ring, Piston, Compression, Center, .010" O.S., 5/64" wide 211351 Ring, Piston, Oil, .010" O.S. 298176 Ring Set—.020" O.S. Piston, consists of: 211357 Ring, Piston, Compression, Top, .020" O.S., 5/64" wide 211356 Ring, Piston, Compression, Center, .020" O.S., 5/64" wide 211355 Ring, Piston, Oil, .020" O.S. 298177 Ring Set—.030" O.S. Piston, consists of: 211361 Ring, Piston, Compression, Top, .030" O.S., 5/64" wide 211360 Ring, Piston, Compression, Center, .030" O.S., 5/64" wide 211359 Ring, Piston, Oil, .030" O.S. The following Piston Ring Sets are used before Serial No. 6306171:
19 297603		Bushing—Crankcase Cover Note: Requires special tools for installation.						
20 294606		Seal—Oil Note: 293740 Seal—Oil Used on Model 100232, 100232 Series Engines. 298041 Seal—Oil Used on the Auxiliary P. T. O. Shaft on type Nos. 0070, 0117, 0126, 0143, 0154, 0177, 0216, 0235, 0245, 0364, 0366, 0368, 0408, 0444, 401092. 298504 Oil Seal and Spacer Used on type Nos. 0211, 0269, 0279, 0303, 0341, 0357, 0382, 0385, 0386, 0389, 0401, 0403, 0410, 0415, 0445, 0446, 0464.						
21 66768		Plug—Oil Filler Note: 295923 Cap Assy. — Oil Filler Uses: 65304 Gasket— Oil Filler						

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION		
297575		Ring Set—Std. Piston, consists of: 211120 Ring, Piston, Comp., Top, Standard 3/32" wide 211121 Ring, Piston, Comp., Center, Std., 3/32" wide 211122 Ring, Piston, Oil, Standard			Note: 221507 Dipper—Connecting Rod Used before Serial No. 6503241.			Used on type Nos. 0038, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454.		
297576		Ring Set—.010" O.S. Piston consists of: 211222 Ring, Piston, Compression, Top, .010" O.S., 3/32" wide 211221 Ring, Piston, Compression, Center, .010" O.S., 3/32" wide 211220 Ring, Piston, Oil, .010" O.S.	31	221741	Lock—Connecting Rod Screw Used after Serial No. 6503231.	45	260642	Tappet—Valve		
		211227 Ring, Piston, Compression, Top, .020" O.S., 3/32" wide 211226 Ring, Piston, Compression, Center, .020" O.S., 3/32" wide 211225 Ring, Piston, Oil, .020" O.S.			Note: 221451 Lock—Connecting Rod Screw Used before Serial No. 6503241.	46	211117	Gear—Cam		
297577		Ring Set—.020" O.S. Piston, consists of: 211227 Ring, Piston, Compression, Top, .020" O.S., 3/32" wide 211226 Ring, Piston, Compression, Center, .020" O.S., 3/32" wide 211225 Ring, Piston, Oil, .020" O.S.	32	93450	Screw—Connecting Rod Used after Serial No. 6503231.			Note: 211284 Gear—Cam Used on type Nos. 0070, 0117, 0126, 0143, 0154, 0177, 0216, 0235, 0245, 0364, 0366, 0368, 0408, 0444, 401092.		
		211229 Ring, Piston, Compression, Center, .030" O.S., 3/32" wide 211228 Ring, Piston, Oil, .030" O.S.			Note: 91162 Screw—Connecting Rod Used before Serial No. 6503241.	52	*27355	Gasket—Carburetor Mounting (2)		
297578		Ring Set—.030" O.S. Piston, consists of: 211230 Ring, Piston, Compression, Top, .030" O.S., 3/32" wide 211229 Ring, Piston, Compression, Center, .030" O.S., 3/32" wide 211228 Ring, Piston, Oil, .030" O.S.	33	211119	Valve—Exhaust	56	298738	Pulley—Rewind Starter Used after Serial No. 6507211.		
					Note: 260860 Valve—Exhaust Used on type Nos. 0038, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454.			Note: 294088 Pulley—Rewind Starter Used before Serial No. 6507221.		
27	260645	Lock—Piston Pin	34	261044	Valve—Intake Used after Serial No. 6911261.			295871 Pulley—Rewind Starter		
28	297581	Pin Assy.—Piston—Standard			Note: 260961 Valve—Intake Used before Serial No. 6912011.			211424 Pulley—V-Belt		
	297582	Pin Assy.—Piston—.005" O.S.			260861 Valve—Intake Used before Serial No. 6912011.			68428 Belt—Vee Used on type No. 0221.		
29	297569	Rod Assy.—Connecting			Used on type Nos. 0038, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361.	57	294303	Spring—Rewind Starter		
	Note:	For Connecting Rod with .020" undersize Crankpin Bore—order No. 298786.			35	260552		Note: 221014 Anchor—Spring To Starter Housing Used on type No. 0221.		
30	221786	Dipper—Connecting Rod Used after Serial No. 6503231.	36	26478	Spring—Exhaust Valve			58	66694	Rope—Rewind Starter—47-1/8" long Used after Serial No. 6507211.
					Note: 26826 Spring—Exhaust Valve Used on type Nos. 0038, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454.			Note: 294584 Rope—Rewind Starter—47-1/8" long Used before Serial No. 6507221.		
			40	93312	Retainer—Valve Spring					If longer rope is needed order No. 66684 (used after Serial No. 6507211) or No. 66514 (used before Serial No. 6507221) and cut to required length.
					Note: 292259 Rotocap—Exhaust Valve	59	230228	Pin—Starter Grip		
					230126 Pin—Exhaust Valve Rotocap Retainer	60	66728	Grip—Starter Rope		
					230127 Retainer—Exhaust Valve Rotocap	61	68618	Bumper—Starter Pulley		
								Note: 66918 Bumper—Starter Pulley Uses: 93254 Screw—Mounting. Used on type No. 0221.		

* Included in Gasket Set—Part No. 297615.

7

* Included in Gasket Set—Part No. 297615.

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
66	298310	Clutch Assembly— Rewind Starter Used after Serial No. 6405220. Note: 296468 Clutch Assy.— Rewind Starter Used before Serial No. 6405250. 298798 Clutch Assy.— Rewind Starter Used on type Nos. 0170, 0180, 0221, 0224, 0281, 0285, 0287, 0316, 0319, 0328, 0347, 0355, 0356, 0358, 0368, 0373, 0377, 0379, 0386, 0387, 0403, 0407, 0425, 0433, 0434, 0435, 0452.			Starter Hsg. on type No. *0221.			211663 Shaft & Gear— Drive Used on type No. 0319. 211918 Shaft & Gear— Drive Used on type No. 0435.
			71	221653	Washer—Clutch Ret. Used after Serial No. 6405220. Note: 221301 Washer—Clutch Retainer Used before Serial No. 6405250.	84	92617	Plug—Breather
			72	26032	Spring—Clutch Retainer	85	92747	Screw—Gear Case Mounting Sem
			73	221661	Screen—Starter Pulley Used after Serial No. 6405220. Note: 220648 Screen—Starter Pulley Used before Serial No. 6405250. 221748 Screen—Starter Pulley Used on type No. 0221.	86	291730	Cover Assembly— Gear Case
						87	19011	Seal—Oil
						88	27313	Gasket—Gear Case Cover
						89	93448	Plug—Oil Drain
						90	297599	Carburetor Assembly Note: 297680 Carburetor Assembly Used on type Nos. 0203, 0229, 401021, 401031, 401033, 401053. 298547 Carburetor Assembly Used on type Nos. 0016, 0219, 0220, 0221, 0230, 0232, 0233, 0235, 0239, 0240, 0244, 0245, 0246, 0287, 0305, 0308, 0313, 0331, 0332, 0334, 0341, 0348, 0350, 0360, 0366, 0367, 0375, 0383, 0388, 0392, 0393, 0399, 0402, 0408, 0409, 0416, 0430, 0433, 0438, 0446, 0449, 0451. 390390 Carburetor Assembly Used on type Nos. 0401, 0403, 0407, 0412, 0414, 0415, 0428, 0445, 0453, 0461.
67	211383	Housing—Starter Clutch Used after Serial No. 6405220. Note: 210400 Housing— Starter Clutch Used before Serial No. 6405250.	74	93490	Screw—Rotating Screen Mounting Sem	95	93385	Screw—Throttle Valve to Shaft Sem
			75	220865	Washer—Spring	96	211203	Throttle—Carburetor
			76	68238	Washer—Ratchet Sealing Note: 270045 Washer— Ratchet Sealing Used with Single Tooth Ratchet on type Nos. 0125, 0134, 0143, 0151, 0152, 0153, 0156, 0159, 0161, 0170, 0171, 0174, 0180, 0181, 401034, 401049, 401050, 401056, 401057, 401059, 401062, 401064, 401068, 401069, 401070, 401075, 401077, 401110, 401111, 401114, 401115, 401116, 401117, 401118.	97	297468	Shaft and Lever— Throttle
68	63770	Ball—Clutch				114	66594	Gasket—Needle Valve Nut
70	298436	Ratchet—Rewind Starter Used after Serial No. 6405220. Note: 296597 Ratchet— Rewind Starter Used before Serial No. 6405250. 298799 Ratchet— Rewind Starter Uses: 66718 Washer, Thrust, Ratchet Used on type Nos. 0170, 0180, 0224, 0281, 0285, 0287, 0316, 0319, 0328, 0347, 0355, 0356, 0358, 0368, 0373, 0377, 0379, 0386, 0387, 0403, 0407, 0425, 0433, 0434, 0435, 0452. 298799 Ratchet— Rewind Starter Uses: 66718 Washer, Thrust, Ratchet * 230813 Adapter— Ratchet Spring * 260414 Spring—Ratchet Between Ratchet No. 298799 and	79	290779	Case Assembly—Gear	116	65978	Packing—Needle Valve
			80	27667	Gasket—Gear Case	117	230590	Nut—Needle Valve
			81	220234	Lock—Gear Case Mounting Screw	118	23433	Valve—Needle
			82	91541	Screw—Cap, Hex. Hd. —5/16-24 x 7/8"	120	92290	Washer—Lock, No. 10 x 1/16 x 3/64"
			82A	92279	Screw—Cap, Hex. Hd. —5/16-24 x 1-1/2"	124	93357	Screw—Sem, Phillips Hex. Hd.
			83	211293	Shaft & Gear—Drive Note: 211338 Shaft & Gear— Drive Used on type Nos. 0156, 0170, 0356, 0379, 0452, 401111, 401114, 401115.	147	230591	Seat—Needle Valve

* Included in Gasket Set—
Part No. 297615.

* Included in Gasket Set—
Part No. 297615.

100202 To 100293

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
280	221384	Used on type Nos. 0350, 0360, 0367.			0126, 0134, 0135, 0136, 0139, 0141, 0142, 0143, 0144, 0145, 0154, 0162, 0174, 0182, 0189, 0195, 0196, 0198, 0201, 0205, 0207, 0210, 0217, 0222, 0225, 0226, 0227, 0228, 0232, 0235, 0237, 0245, 0248, 0256, 0258, 0259, 0266, 0269, 0296, 0302, 0304, 0317, 0322, 0329, 0332, 0345, 0347, 0361, 0362, 0365, 0366, 0370, 0372, 0401, 0404, 0408, 0412, 0414, 0415, 0423, 0425, 0431, 0434, 0438, 0444, 0447, 0460, 401020, 401022, 401023, 401027, 401030, 401036, 401038, 401044, 401045, 401053, 401057, 401066, 401067, 401081, 401082, 401084, 401090, 401096, 401099, 401100, 401101, 401102, 401103, 401112, 401117, 401118.	303	91464	Elbow—Exhaust 90 Degree, Street
		Strap—Control Rod Note: 230580 Guide—Control Rod Stop 93266 Fastener—Guide Used in 221384 Strap on type Nos. 0308, 0430. 230944 Guide—Control Rod Used in 221384 Strap on type Nos. 0015, 0035, 0036, 0037, 0049, 0070, 0389, 0391. 390341 Strap—Control Rod Used on type Nos. 0132, 0140, 0148, 0155, 0178, 0179, 0193, 0194, 0195, 0214, 0242, 0251, 0252, 0261, 0267, 0279, 0299, 0307, 0317, 0325, 0335, 0337, 0346, 0353, 0365, 0381, 0382, 0384, 0458.						Note: 91219 Elbow—Exhaust 45 Degree, Street Used on type Nos. 0300, 0331, 0363, 0382, 0405, 0409, 0443.
300	297274	Muffler—Exhaust (Side Outlet) Note: 89953 Muffler— Exhaust Used on type Nos. 0229, 0314, 0352, 0440. 294599 Muffler— Exhaust Used on type Nos. 0151, 0159, 0164, 0169, 0211, 0219, 0247, 0249, 0251, 0252, 0254, 0274, 0275, 0281, 0287, 0292, 0300, 0303, 0315, 0324, 0325, 0331, 0333, 0334, 0348, 0360, 0363, 0367, 0376, 0380, 0395, 0396, 0403, 0405, 0406, 0407, 0409, 0443, 0445, 0455, 401047, 401048, 401051, 401052, 401059, 401062, 401074, 401075, 401097, 401116. 297506 Muffler— Exhaust (Direct Outlet) Used on type Nos. 0035, 0037, 0038,			0433. 390918 Muffler— Exhaust Uses: 222261 Deflec- tor—Exhaust 93014 Screw— Sem 221885 Shield— Heat Used on type Nos. 0437, 0456, 0462. 391055 Muffler— Exhaust Used on type Nos. 0410, 0427, 0446, 0451, 0459. 391060 Muffler— Exhaust Used on type Nos. 0350, 0378. (Also uses 222291 Muffler Guard) 302 91242 Locknut—Muffler and Elbow	304	297596	Housing—Blower (For Rewind Starter) Note: 297260 Housing— Blower (For Rope Starter) Used on type Nos. 0110, 0253, 0255, 0256, 0264, 0265, 0268, 0272, 0289, 0290, 0293, 0294, 0297, 0307, 0320, 0321, 0336, 0348, 0376, 0398, 0411, 0421, 0431, 0455, 0458, 0459, 0465, 401033. 297597 Housing— Blower (For Rewind Starter) Used on type Nos. 0160, 0165, 0203, 0273, 401021, 401031, 401046, 401108. 297855 Housing— Blower (For Rewind Starter) Used on type Nos. 0137, 0141, 0155, 0157, 0158, 0159, 0168, 0175, 0191, 0229, 0231, 0236, 0237, 0240, 0242, 0247, 0269, 0281, 0288, 0305, 0310, 0317, 0345, 0346, 0374, 0375, 0390, 0395, 0402, 0412, 0413, 0414, 0415, 0420, 0424, 0437, 0453, 401045, 401048, 401051, 401053, 401058, 401068, 401079, 401087, 401093, 401116. 298572 Housing— Blower (For Rewind Starter) Uses: 297663 Hsg. — Starter 222060 Spacer— Starter Housing (4) 230581 Nut— Starter Mtg. (4)

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
		93414 Bolt— Starter Mtg. (4)			293918 Plug—Spark (with Gasket)	432	221377	Cap—Spring
		92290 Washer— Lock (4)			Used on type Nos.	433	93265	Pin—Diaphragm Cover
		Used on type No.			0038, 0163, 0196,	434	210959	Cover—Diaphragm
		0221.			0217, 0223, 0234,	435	93141	Screw—Diaphragm Cover
		298636 Housing— Blower			0248, 0276, 0302,	454	296178	Housing—Fuel Pipe Screen (for 3/16" O.D. Pipe)
		Used on type Nos.			0355, 0361, 0362,			
		0219, 0226, 0308,	340	26018	401091, 401102.	473	93475	Screw—Sem
		0326, 0349, 0383,	341	93381	Spring—Breaker Arm	506	90200	Screw—Machine, Fil. Hd. —8-32 x 1/2"
		0409, 0410, 0430,			Screw—Breaker Arm			
		0438, 0451, 0467.			Mounting Sem	507	66895	Insulator
		299541 Housing— Blower	342	65704	Plunger—Breaker Point	516	260374	Spring—Connector
		Used on type Nos.	344	93042	Screw—Condenser Clamp Mounting Sem	521	298529	Shielding—Ignition Cable
		0316, 0319, 0328,	345	220366	Cover—Breaker Point and Condenser	526	93343	Screw—Tank Bracket Mounting Sem
		0347, 0355, 0356,			Note: 222168 Cover—Breaker Point and Condenser	527	221514	Clamp—Breather Tube
		0358, 0368, 0377,			Used on type Nos.	528	230722	Tube—Breather
		0379, 0386, 0387,			0180, 0316, 0319,	529	67838	Grommet—Breather Tube
		0425, 0434, 0435,			0328, 0347, 0355,	534	93322	Screw—Air Cleaner
		0452.			0356, 0358, 0368,		Note:	93374 Screw—Air Cleaner
305	93158	Screw—Blower Housing Mounting			0377, 0379, 0386,			Used on type Nos.
306	221511	Shield—Cylinder			0387, 0397, 0425,			0228, 401057.
307	93042	Screw—Cylinder Shield Mounting Sem	346	93014	0434, 0435, 0452.			230741 Stud—Air Cleaner
308	221512	Cover—Cylinder Head			Screw—Dust Cover Mounting			92067 Nut—Wing
325	298731	Starter Pulley with Screen	347	221808	Switch—Stop			Used on type Nos.
330	29878	Rope—Starter			Note: 293739 Switch—Stop			0255, 0388, 0418,
331	220865	Washer—Flywheel			Used on type Nos.			0441, 0462.
332	92284	Nut—Flywheel			0361, 0362, 0369,	535	27987	Element—Air Cleaner
333	298316	Armature—Magneto (Used after Serial No. 6308231.)			0370, 0373, 0401, 0422.		Note:	270067 Element—Air Cleaner
333A	297594	Armature—Magneto (Used before Serial No. 6308261.)	353	92791	Washer—Lock (2)			Used on type Nos.
			354	90576	Nut—Terminal			0228, 401057.
334	93014	Screw—Air Guide Mounting Sem	356	295413	Wire—Ground			270209 Element—Air Cleaner
335	93414	Screw—Armature Mtg.			Note: 391115 Wire—Ground			Used on type Nos.
335A	93215	Screw—Armature Mounting Sem			Used on type Nos.			0255, 0388, 0418.
336	297250	Cable—Ignition (Used before Serial No. 6208220. Cables used after this Serial Number are integral with the Ignition Coil.)	357	91539	Key			390492 Element—Air Cleaner
337	298809	Plug—Spark (with Gasket	358	297615	Gasket Set			Uses: 390588 Cover— Air Cleaner
		1-1/2" High—38 M. M.	362	291630	Shield—Spark Plug (with Stop Switch)			221969 Support— Air Cleaner
		Note: Spark Plugs 298809, 29693 and 293918 use Ignition Cable Terminal No. 221798 .	372	220477	Clamp—Condenser			270730 Gasket— Air Cleaner
		29693 Plug—Spark (with Gasket)	375	294628	Breaker Points and Condenser Set			Used on type Nos.
		2" High—51 M. M.			Note: 299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key— Flywheel	536	297036	Cleaner Assembly—Air
			392	260455	Spring—Fuel Pump		Note:	297778 Cover— Carburetor Intake
			394	270026	Diaphragm			Used on type Nos.
			409	299837	Diaphragm			0171, 401049.
					Lever-Trol—Speed Control			401050, 401070.
			414	220982	Washer			297595 Cleaner Assembly—Air
								Used on type Nos.
								0228, 401057.

100202 To 100293

REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION	REF. NO.	PAGE NO.	DESCRIPTION
		299593 Cleaner Assembly—Air	541	22398	Washer	614	93306	Cotter—Hair Pin
		Uses: 221634 Cover—Air Cleaner	542	92265	Screw	615	93307	Retainer—E-Ring
		221969 Support—Air Cleaner	552	230732	Bushing—Governor	616	230723	Crank—Governor
		280015 Cup—Air Cleaner	562	92613	Bolt—Governor Lever	621	297472	Switch—Stop
		Used on type Nos. 0255, 0388, 0418.	592	90356	Nut—Hex. —10-24	624	390383	Crank—Bell
538	299545	Rod—Control	608	297259	Starter Assy. —Rewind	626	230749	Spacer—Gov. Crank
	Note:	390756 Rod—Control		Note:	298573 Starter Assy. —Rewind	629	261094	Spring—Throttle Return
		Used on type Nos. 0316, 0328, 0386, 0387, 0425, 0434, 0452.			Used on type No. 0221.	634	270167	Washer, Throttle Shaft (Felt)
539	221372	Clip—Control Rod	609	260694	Spring—Throttle Link	635	66538	Elbow—Spark Plug
539A	93520	Clamp—Choke Rod	612	296811	Pipe—Fuel	665	298858	Oil Minder
			613	93377	Screw—Muffler Mtg.	681	299060	Needle Valve Kit
				Note:	93704 Screw—Muffler Mounting	682	211516	Shield—Clutch
					Uses: 222263 Lock—Screw	731	299419	Hood—Snow
					Used on type Nos. 0437, 0456, 0462.	733	93518	Screw—Hood
						779	390383	Link—Bell Crank
						780	222101	Anchor—Spring